



First time connecting?  
Follow the steps below and register on our app.


Go to **app.techmetrys.eu** 

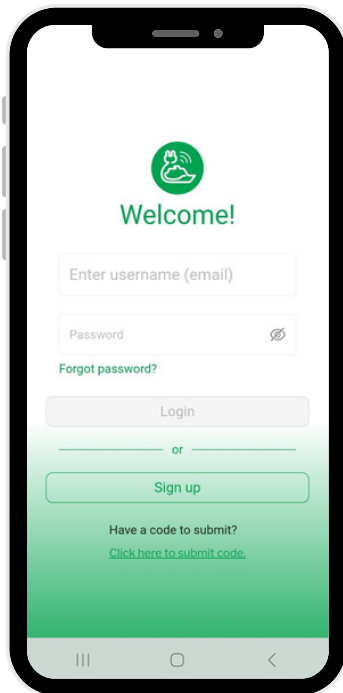


Click the green **Sign up** button

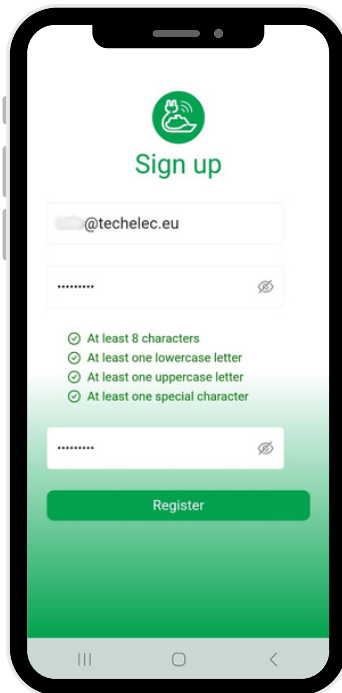


Fill in email and password  
*! A verification email will be sent,  
so please use an active email address*

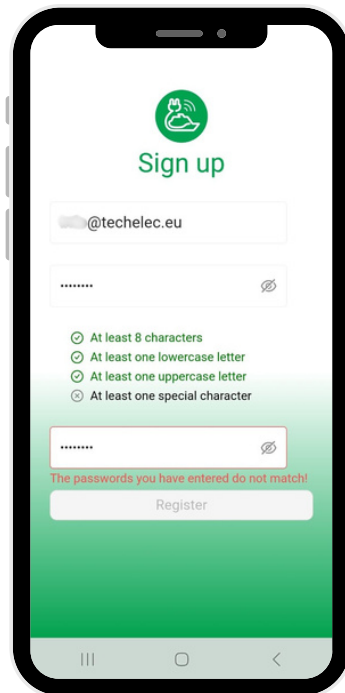


The **Register** button will be activated only when the password requirements are met

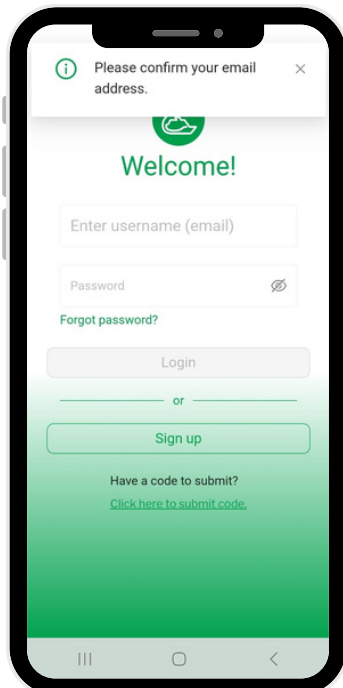


A pop-up will appear, and an email will be sent

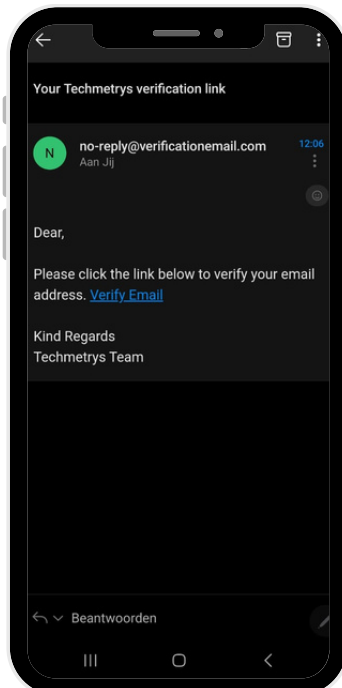


Open the email and click the blue **Verify Email** link

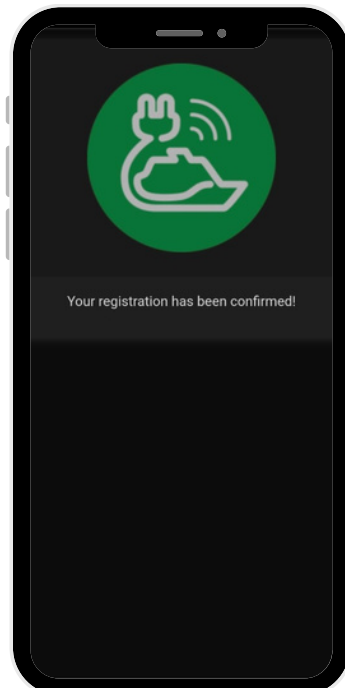


A pop-up will confirm successful email registration

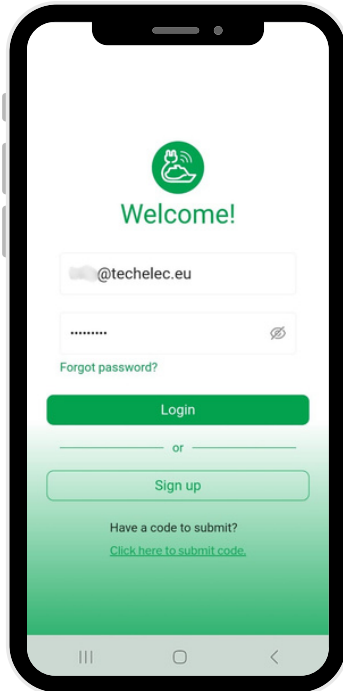


Log in with your credentials

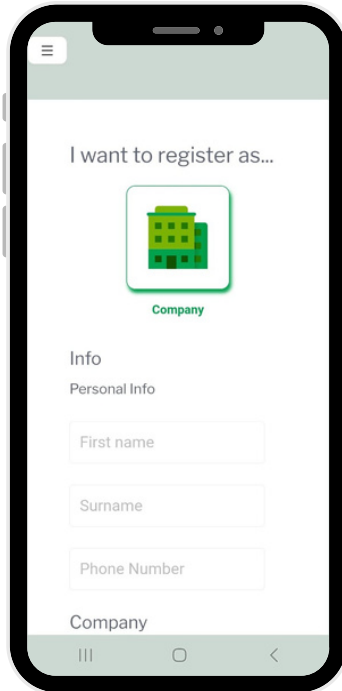


Complete all your company information  
**! All fields are mandatory**

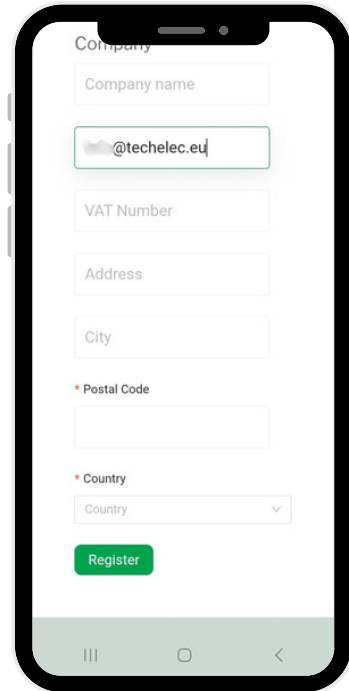


For your convenience, your email is already pre-filled in the invoicing email address field

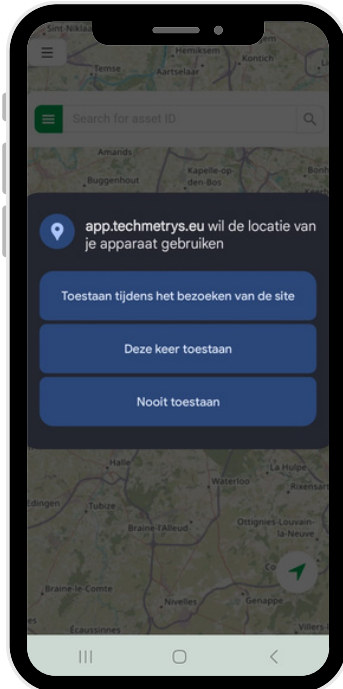


Allow the app to find your location for an immediate overview of the nearest cabinet(s)

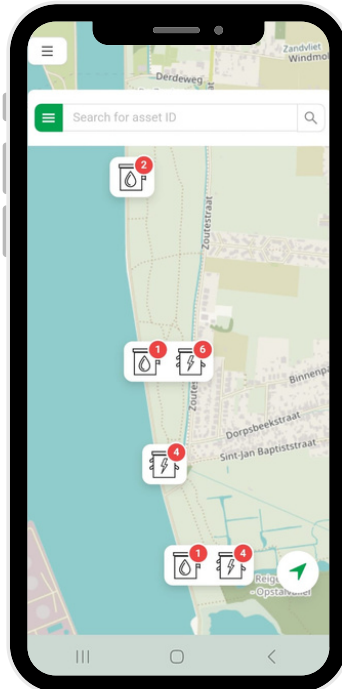


To complete your registration, add a vessel to your profile by clicking the menu button in the top left corner

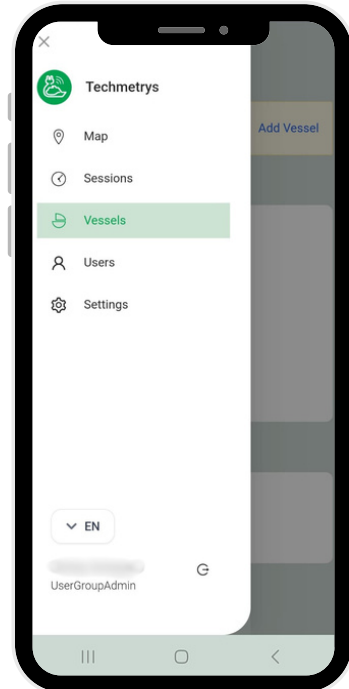


Click on **Vessels** to go to your vessels overview

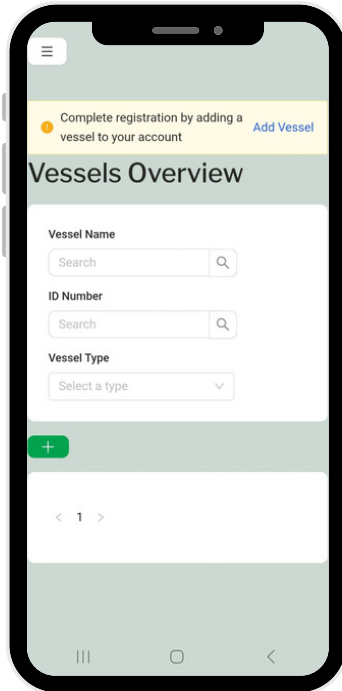


Click on the green + symbol to add your vessel

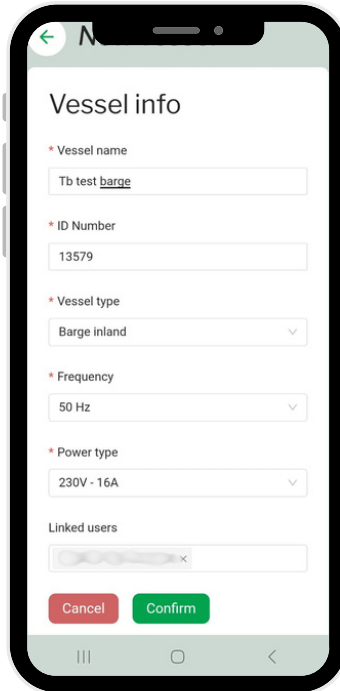

Complete all your vessel's information and click the green **Confirm** button

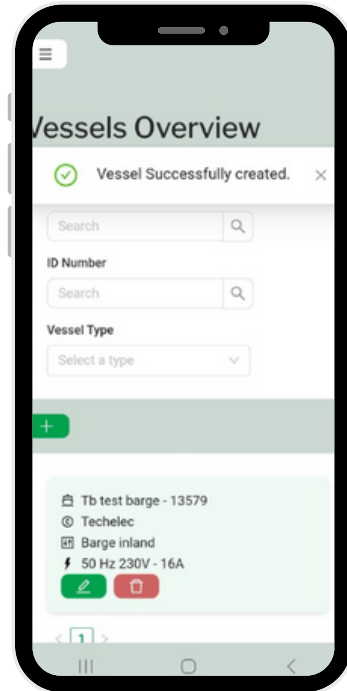


Your vessel is successfully registered

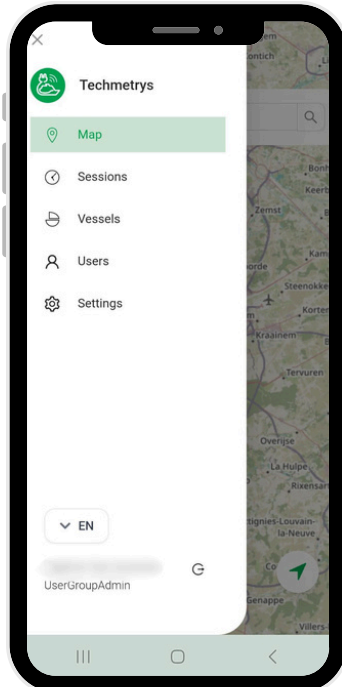

Click menu and then **Map** to open the overview



On the map, find the cabinet to which you want to connect and click it, or type the ID in the search bar

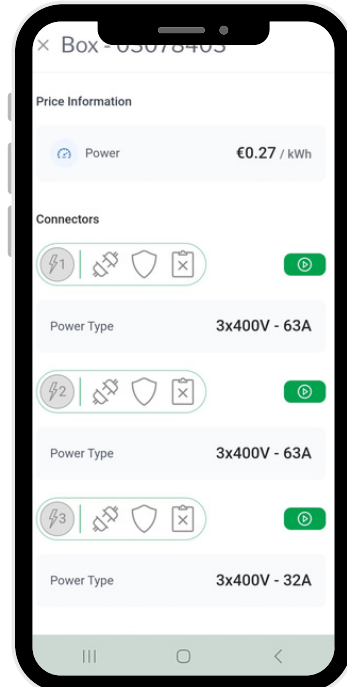

Click the green **start** button next to the correct connector to start your session. The shield symbol will turn green.

## Proceed the next steps at the cabinet



The cabinet is at rest and ready to connect and supply.

All lights out



Once the lightning bolt LED is blinking, the software session has started successfully, and you can plug in the CEE plug.

Left LED blinking



The connector LED will light up when the CEE plug is successfully connected.

Left LED blinking, Second LED steady on



Press the (re)start button, and the electricity consumption will start. Both green LEDs will be steady on.

Both green LEDs steady on

# Troubleshooting at the cabinet



Connector LED doesn't turn on

The CEE plug connection is not successful.  
Remove the plug and try again.  
Make sure the plug is pushed  
far enough in the connector.



Boat error LED blinking

In case of an error during  
electrical consumption,  
the boat error LED will start blinking.  
You can restart your session up to 3 times  
by pushing the (re)start button.



Boat error LED steady on

When all restart attempts have been used,  
the boat error LED will be steady on.  
Only when you resolve the technical issue and  
contact our service number  
will a restart be possible.



Socket error LED is steady on

If the socket error LED is steady on,  
the cabinet is not available and  
needs a service intervention.